


PMI Kits & Trays

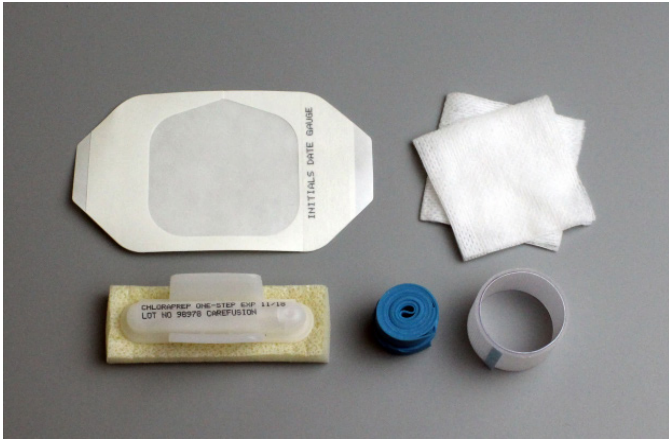

K705 - PMI IV START KIT

- ◆ 1 Tourniquet
- ◆ 1 Roll of Tape
- ◆ 1 ChloraPrep Insert
- ◆ 1 ChloraPrep One-Step
- ◆ 2 Gauze Sponges, 2" x 2"
- ◆ 1 Transparent Dressing



K411C - DRESSING CHANGE TRAY W/CHLORAPREP SWABSTICK 30/CS

- | | |
|-----------------------------------|----------------------------------|
| ◆ 2 Masks | ◆ 1 Gauze Sponge, 2" x 2" |
| ◆ 1 Pair of Walleded Gloves | ◆ 1 Non-Adherent Gauze, 2" x 2" |
| ◆ 1 Wrap, 13"x 19" Sterile Field | ◆ 1 Slit Non-Woven Sponge 2"x 2" |
| ◆ 1 Tape Measure | ◆ 1 Alcohol Pad |
| ◆ 1 ChloraPrep® Insert | ◆ 1 Tape Roll |
| ◆ 1 ChloraPrep® Swabsticks, 3/ Pk | ◆ 1 Transparent Dressing |
| ◆ 1 Gauze Sponge, 4"x 4" | |

* All kits are not made with natural rubber latex.