


PMI IVSTART KIT

Essential Tools for Inserting IVs

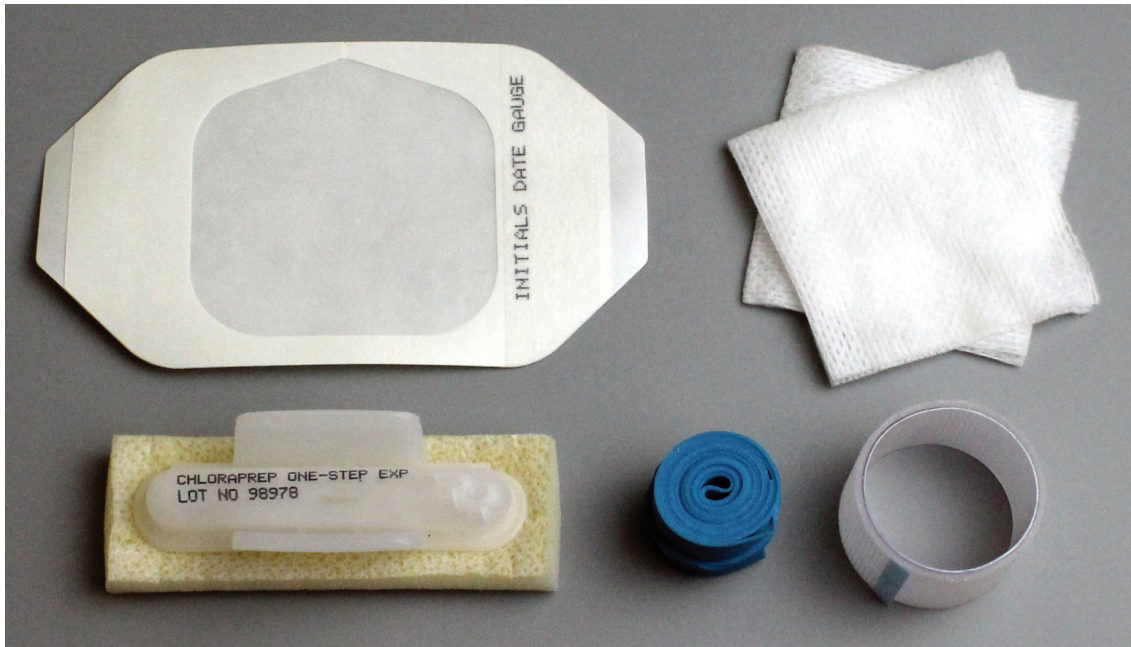

Kit Components:

- 1 Tourniquet
- 1 Roll of Tape
- 1 Chloraprep® Insert
- 1 Chloraprep® One-Step
- 2 Gauze Sponges, 2" x 2"
- 1 Transparent Dressing

*Not manufactured with natural rubber latex

Components are assembled, sterilized and ready to use

The **PMI IVSTART KIT** is designed to save time while reducing the risk of contamination. Fewer packages to open means efficient procedures with less waste.

Ordering Information:

Item Number	Description	Qty.
K705	PMI IV Start Kit Latex Free	100/box

PMI DRESSINGCHANGE KIT

Essential Supplies for Safe Access and Care



Conveniently Assembled Sterile Supplies

The PMI DRESSINGCHANGE KIT is a convenient way to maximize efficiency for clinicians by providing essential components for IV site access. Pre-assembled supplies means less packaging, handling, and less waste.

*Not manufactured with natural rubber latex

Kit Components:

- 2 Masks
- 1 Pair of Walleded Gloves
- 1 Wrap, 13" x 19" Sterile Field
- 1 Tape Measure
- 1 ChloraPrep® Insert
- 1 ChloraPrep® Swabsticks, 3/Pk
- 1 Gauze Sponge, 4" x 4"
- 1 Gauze Sponge, 2" x 2"
- 1 Non-Adherent Gauze, 2" x 2"
- 1 Slit Non-Woven Sponge, 2" x 2"
- 1 Alcohol Pad
- 1 Tape Roll
- 1 Transparent Dressing

Ordering Information:

Item Number	Description	Qty.
K411C	PMI Latex Free Dressing Change Kit with Chloraprep	30/box